




DESIGN CP	DRAWN BY CP	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED #	APPROVED #	DRAWING NO. DSI 9065	REV. C SHEET 1 OF 1
DATE 01.04.11		TITLE AS350/355 STEP INSTALLATION	SCALE NTS
A	97.05.20	NEW ISSUE	
B	98.11.23	NON-SPECIFIC BOLT ADDED	
C	01.04.11	REMOVED SPACERS	

## DART SERVICE INSTRUCTION

TO AMEND INSTALLATION DRAWING D350-591 REV D  
REF. CANADIAN STA: SH92-6  
REF. FAA STC: SH967NE

FOR THE D350-591-111/-111A/-113/-115/-117/-119  
INSTALLATIONS, THE D2346 SPACERS ARE NO LONGER REQUIRED.  
LONGER OR SHORTER AN4 BOLTS MAY BE SUBSTITUTED OR  
ADDITIONAL AN960JD416 WASHERS CAN BE INSTALLED UNDER THE NUT  
TO ENSURE 1.5-4 THREADS IN SAFETY.

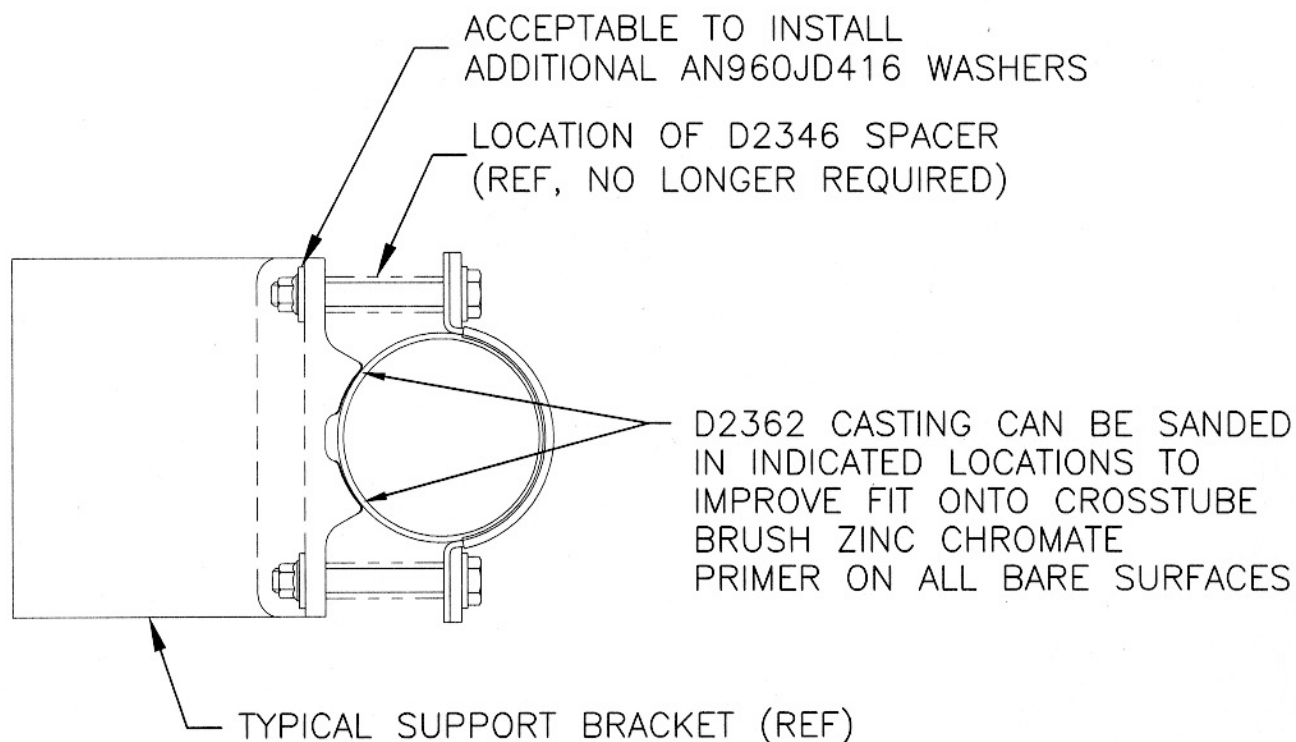

Copyright © 1997 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED  
OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.